


## Configuring HOBOWare® for a Keyspan® USB-to-Serial Adapter (ADAPT-SER-USB)

1. Install the Keyspan USB-to-serial adapter software from the CD included with the device or download the software from the Support tab at:


<http://www.tripplite.com/en/products/model.cfm?txtModelID=3914>

Follow the Keyspan installation instructions.

2. Open the Keyspan USB Serial Adapter Assistant and note the COM number assigned to the device. In this example, it is COM4.

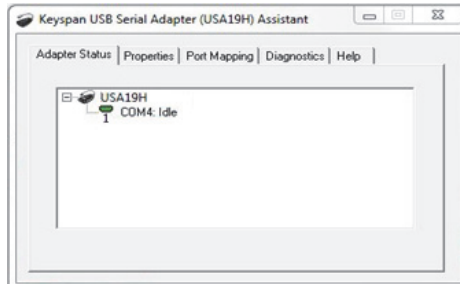

3. Open HOBOWare. From the File menu on Windows or from the HOBOWare menu on Mac, select Preferences. Under Communications, click the arrow to open Device Types. Make sure "USB and serial devices" is selected. Click the arrow to open Serial Ports. Select the COM port noted in Step 2 (in this example, it is COM4). **Note:** On a Mac, the Keyspan adapter will be listed as something similar to "USA19H1d1P1.1."

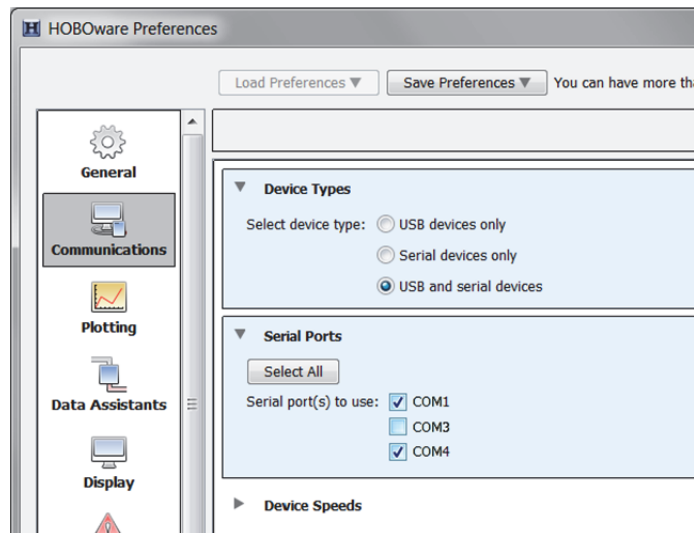

Click OK in the Preferences window to save these settings. HOBOWare should now be configured to work with the Keyspan USB-to-serial adapter.